

ORIG. ZUSATZSCHEINWERFER

original auxiliary light

20381-00



Vorab den orig. Halter der Zusatzscheinwerfer demontieren und an den Schutzbügel montieren. Gegebenenfalls Kabelbinder der Kabelführung lösen!

First, remove the original bracket for the auxiliary headlights and fit it to the protection bar. If necessary, loosen cable ties of the cable guide!

Tout d'abord, retirez le support d'origine des phares auxiliaires et montez-le sur la barre de protection. Si nécessaire, desserrer les colliers de serrage du guide-câble !




ORIG. ZUSATZSCHEINWERFER

original auxiliary light

20380-XXX

LINKS
left/liens

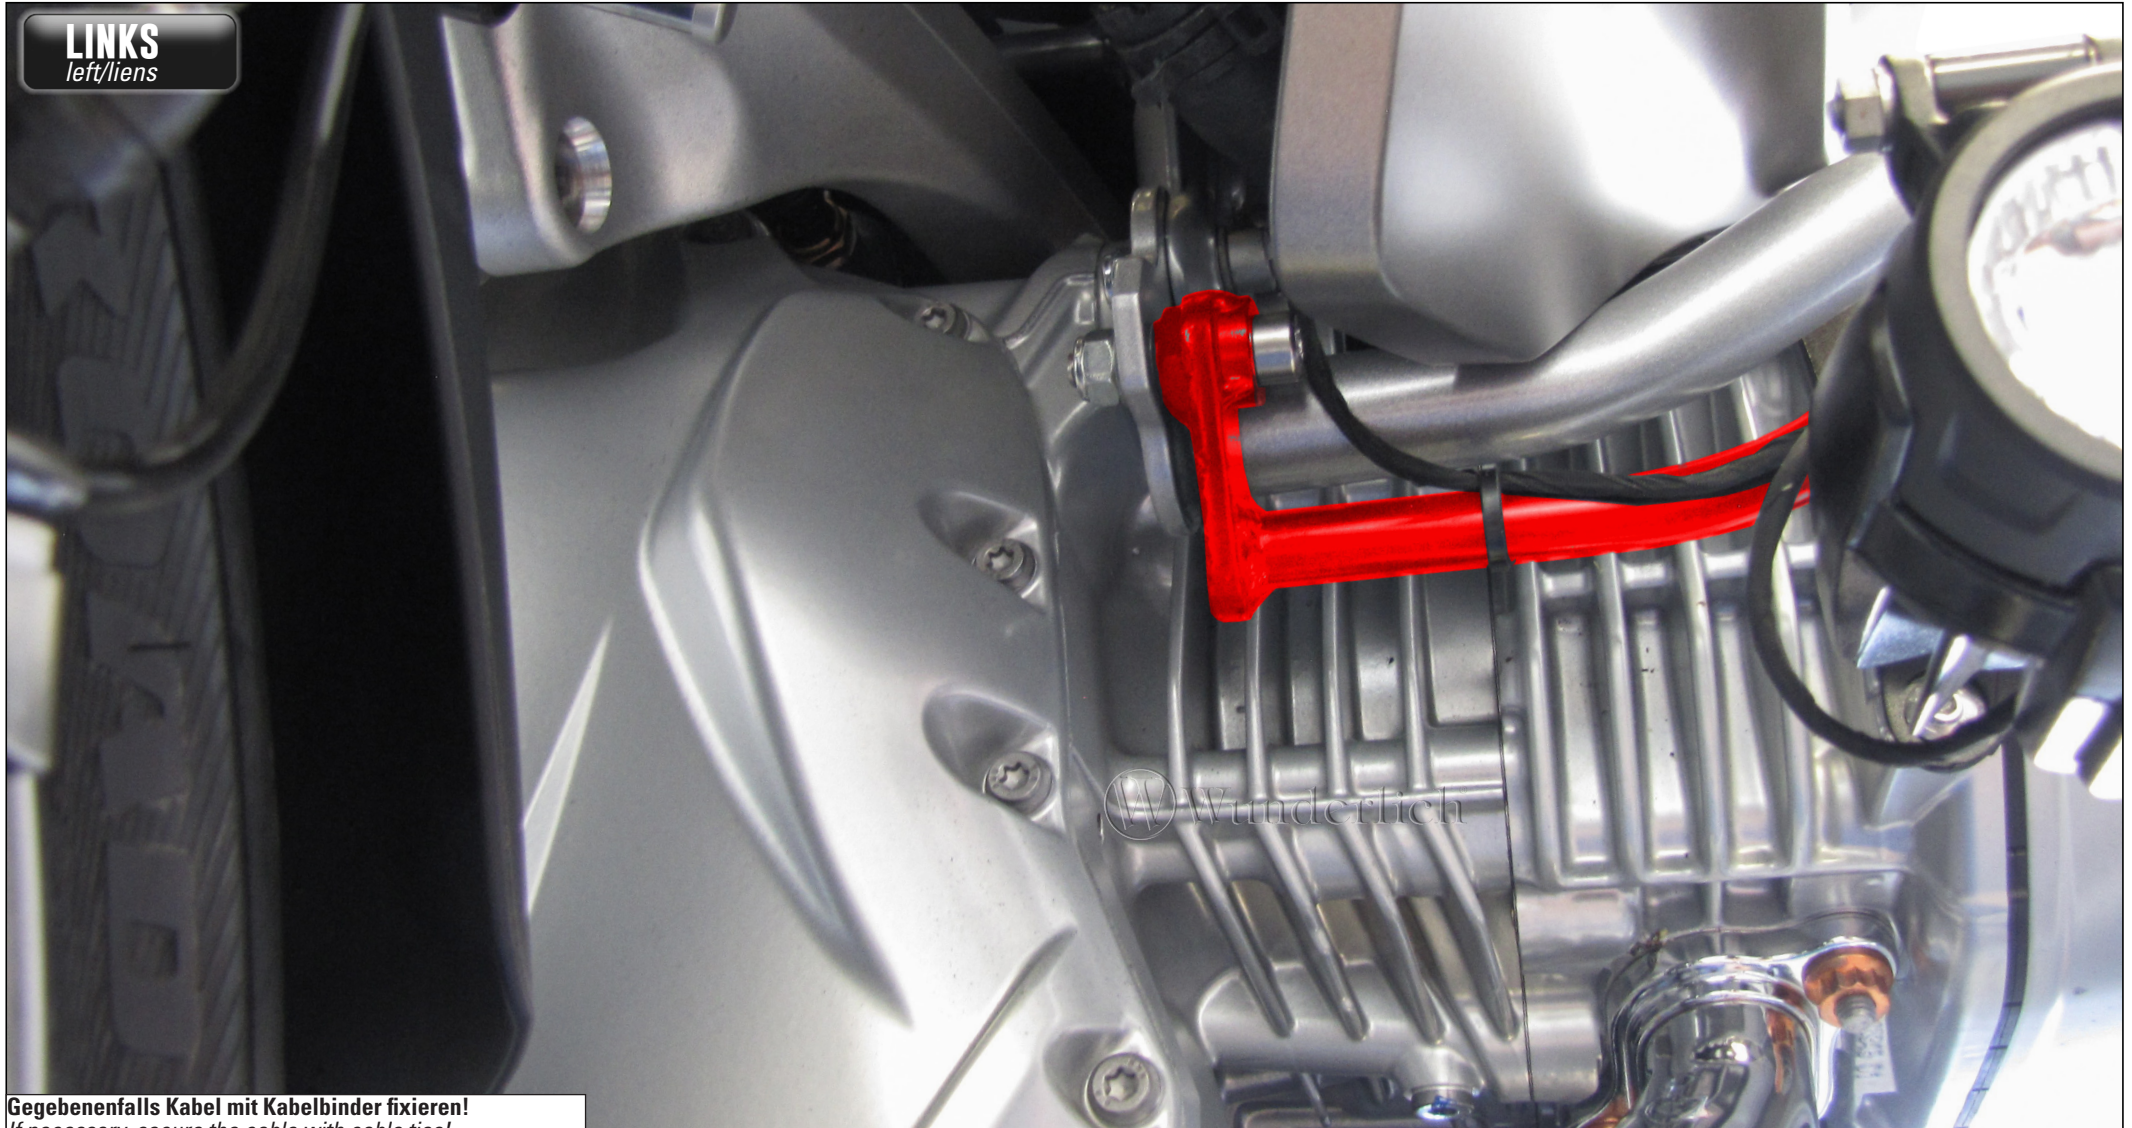

Gegebenenfalls Kabel mit Kabelbinder fixieren!
If necessary, secure the cable with cable ties!
Si nécessaire, fixez le câble à l'aide de colliers de serrage !

