


# VERBUNDSTREBE FÜR OFFROAD

Center strut | Puntal entre barras | Traverse | Traversa

Artikel.-Nr: 26443-00x

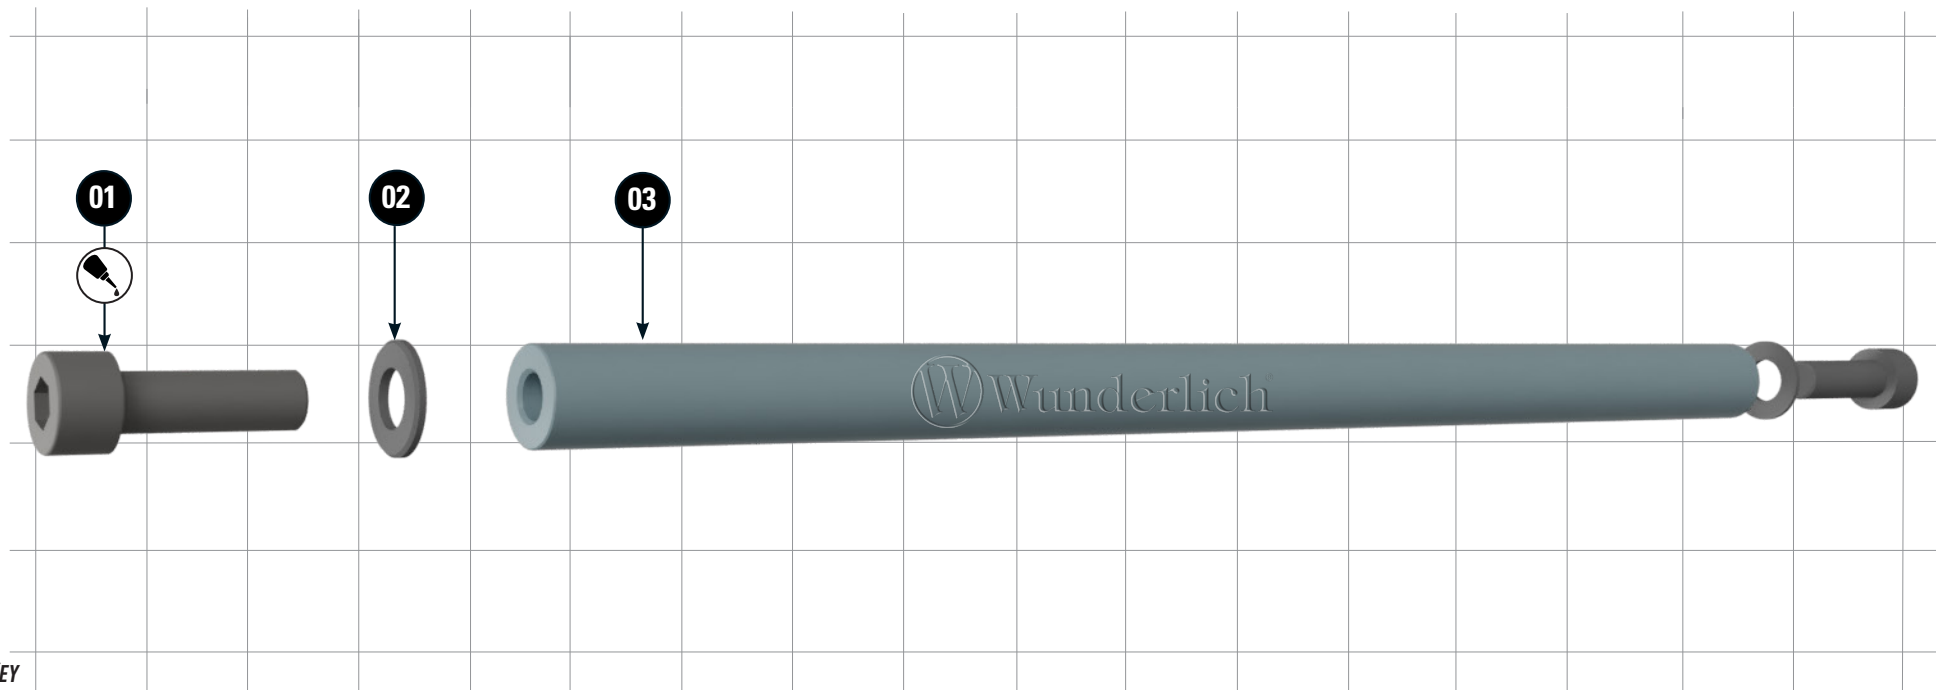

## LEGENDE / KEY



Anbau Tipp  
Fitting tip



Schraube  
Screw



Achtung  
Attention



Schraubensicherung  
Thread locking fluid



Vergrößerung  
Magnification



M10x14  
Nm  
Drehmoment  
Torque




Montagepaste  
Fitting lubricant

| # | BEZEICHNUNG  | MENGE |
|---|--|-------|
| 1 | DIN/ISO 7380SA2-8-20-TX Linsenkopfschraube / <i>pan head screw</i> | 2     |
| 2 | DIN125 (ISO 7089) U-Scheibe / <i>washer</i>                        | 2     |
| 3 | Verbundstrebe / <i>center strut</i>                                | 1     |



01

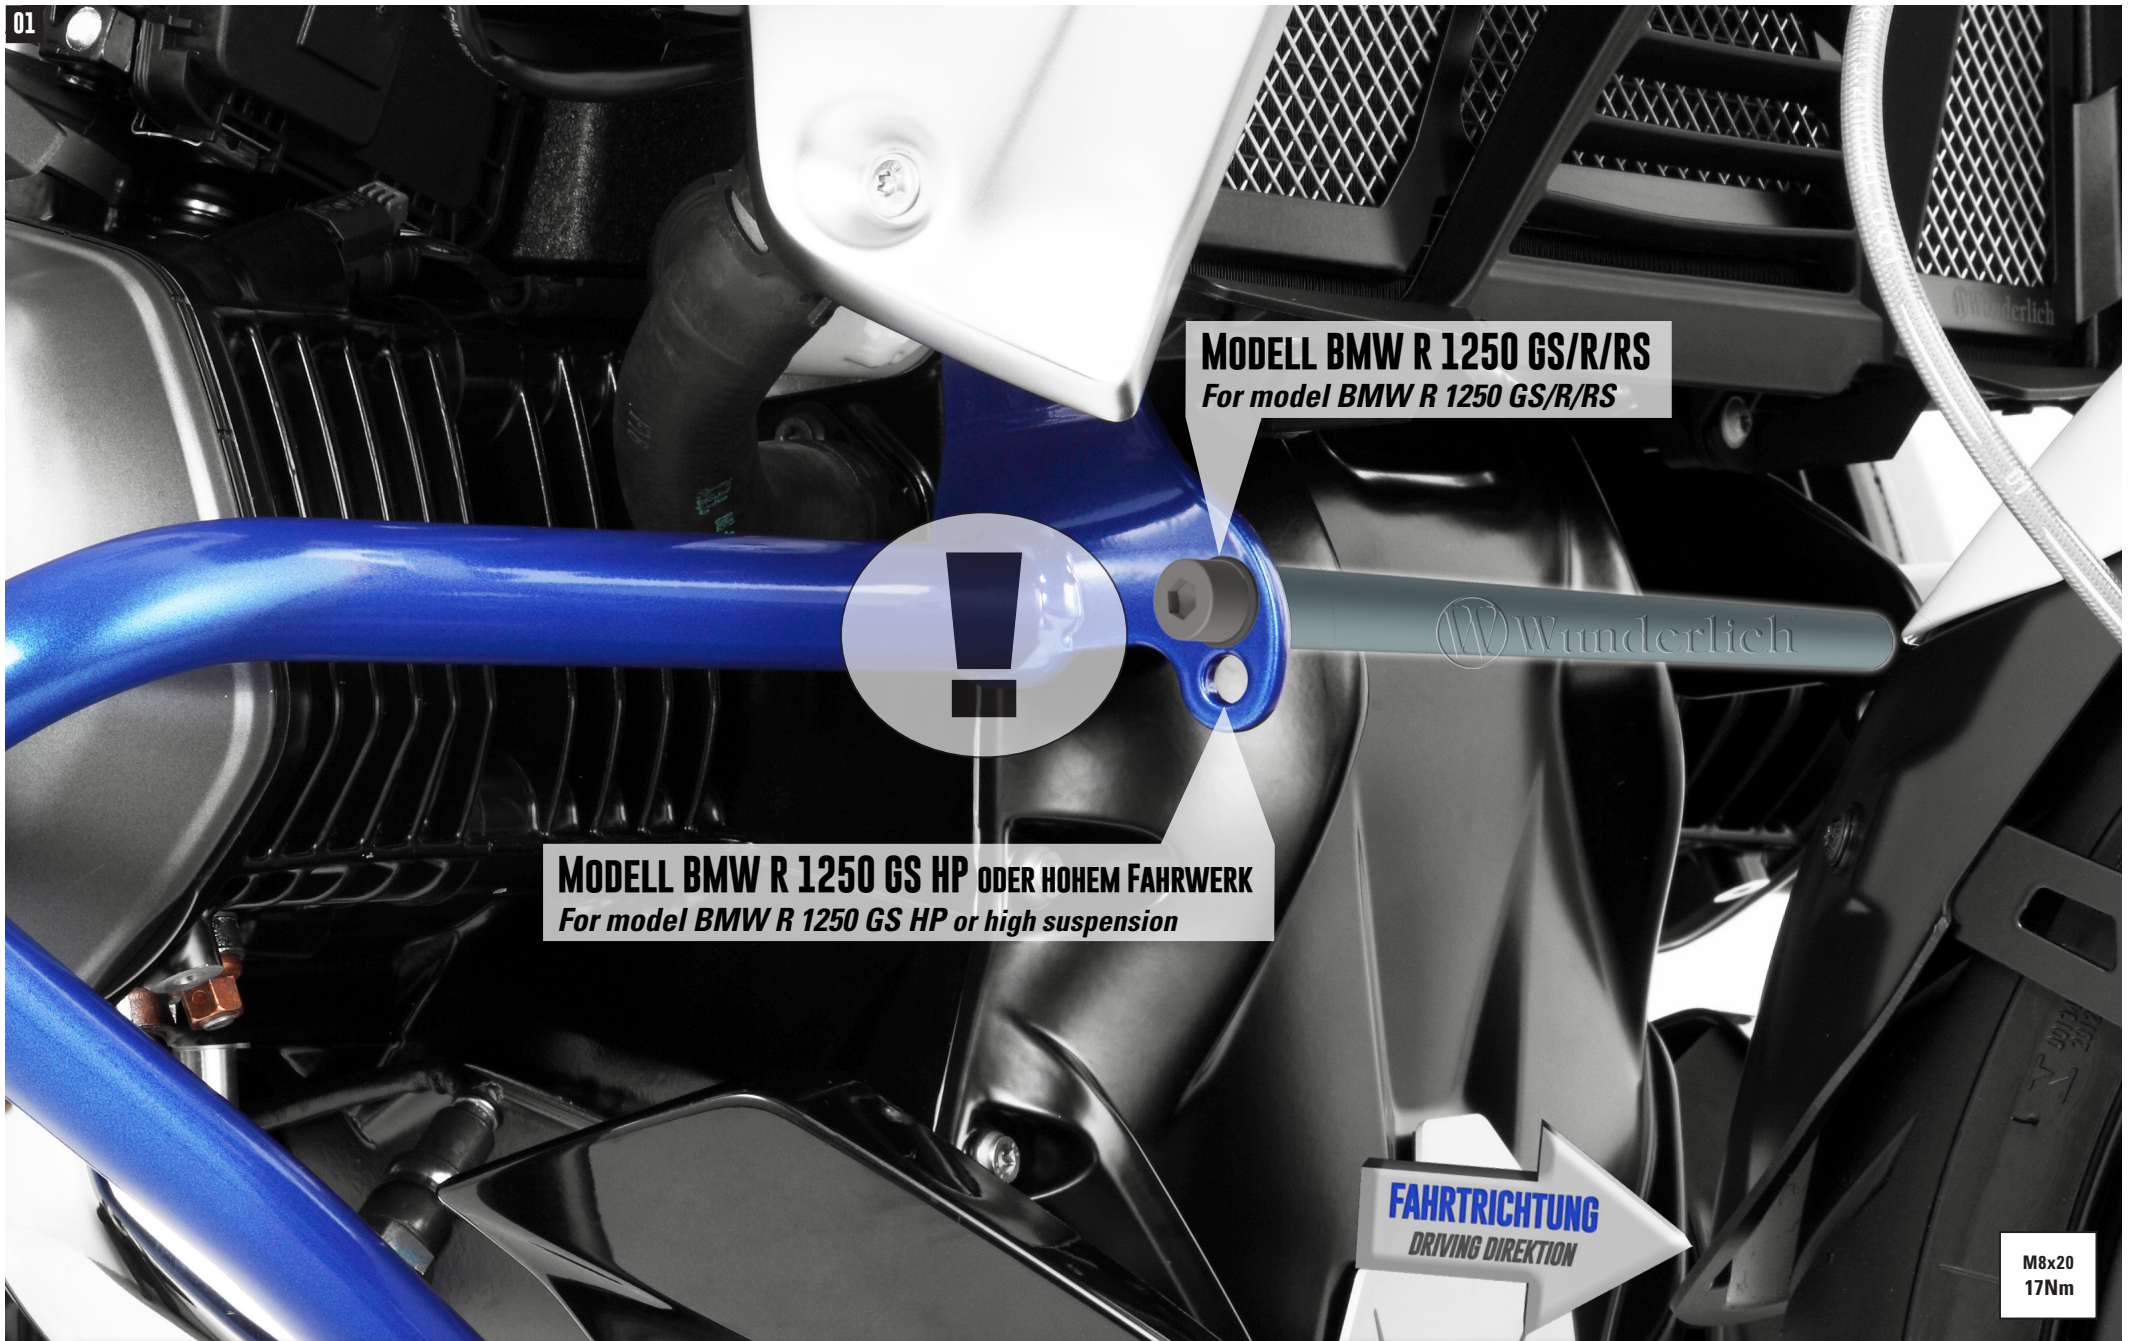

**MODELL BMW R 1250 GS/R/RS**  
*For model BMW R 1250 GS/R/RS*

**MODELL BMW R 1250 GS HP ODER HOHEM FAHRWERK**  
*For model BMW R 1250 GS HP or high suspension*

Wunderlich

**FAHRRICHTUNG**  
 DRIVING DIREKTION

M8x20  
 17Nm

**! VOR DER MONTAGE DIE OBEREN SCHRAUBEN DES MOTORSCHUTZBÜGELS LÖSEN.**  
*Before mounting, loosen the top screws of the engine guard.*

