# MOTORCYCLE STYLING - BMW R1200GS

GS Lines | Style Sport





## SIG-1011 BMW R1200GS LC 2013-2016 GS Lines One Colour Cobalt Blue Side Tank Styling Stickers

GS LINES Series styling kit gives to your motorcycle a unique and sport character.

<b>Product Information</b>	
Fits Model	BMW R1200GS LC 2013-2016 Model Year   All colour models
Material Specifications	Premium Quality Cast Vinyl   Waterproof   Colour fade-proof
Installation	Easy   Dry application   Cut to Size - No trimming necessary   No need to remove any parts
Area Coverage	This kit comes in multible pices   The original paint colour around the stickers will remain visible
Installation Videos	www.signaturecd.com / Select from Home Page: Help Desk - Installation videos / General Products Playlist
Colours	Gobalt Blue Gloss


# MOTORCYCLE STYLING - BMW R1200GS GS Lines | Style Sport



## **Positioning**

Make sure the sticker are positioned correctly on the tank. Remove positioning guidelines after stickers installation.



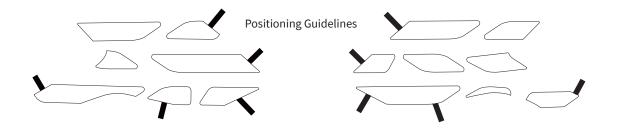

# **MOTORCYCLE STYLING** - BMW R1200GS

GS Lines | Style Sport



## **DRY APPLICATION INSTRUCTION**

- > Read the product installation instructions carefully before attempting installation.
- > Product installation instructions are included with each product.
- > Make sure hands are carefully clean before beginning installation.
- > Clean the surface with 70% alcohol
- > Ideal installation temperature: 15-35 degrees Celsius (60-90 degrees Fahrenheit).
- > Avoid installing in direct sunlight or in windy conditions.
- > Be sure that you made the correct sticker positiong.
- > Use the heat gun or the hair dryer from a descent distance (15cm)
- > With the heat gun remember if your fingers are burnt then the vinyl will burn also.

#### Tools you need

- > A soft squeegee or a soft microfiber cloth over a credit card or a squeegee.
- > A 70% alcohol for cleaning the desired installation area.
- > Heat Gun
- > Paper Tape
- > Scissors

## **WET APPLICATION INSTRUCTIONS**

- > Read the product installation instructions carefully before attempting installation.
- > Product installation instructions are included with each product.
- > Make sure hands are carefully clean before beginning installation.
- > Clean the surface with 70% alcohol.
- > Always wet your fingers before handling the adhesive side of the film. Touching the adhesive side of the film can cause permanent and visible marks.
- > Keep both sides of the film wet during installation.
- > Always use a soft squeegee or a soft microfiber cloth over a credit card or squeegee.

in order to not cause any permanent scratches during application.

- > Do not put too much pressure during the squeegee strokes in order to not cause any permanent scratches.
- > Be certain that all squeegee strokes overlap each other in order to avoid trapped water bubbles.
- > Ideal installation temperature: 15-35 degrees Celsius (60-90 degrees Fahrenheit).
- > Avoid installing in direct sunlight or in windy conditions.
- > Use the heat gun or the hair dryer from a descent distance (15cm).
- > With the heat gun remember if your fingers are burnt then the vinyl will burn also.

#### Tools you need

- > A soft squeegee or a soft microfiber cloth over a credit card or a squeegee.
- $\,>\,$  A 70% alcohol for cleaning the desired installation area.
- > Johnson's baby Shampoo. (On a spray bottle add 5% of shampoo or one drop per 100ml. and fill it up with water).
- > Heat Gun

# **STICKERS REMOVAL INSTRUCTIONS**

- > With the heat gun or hairdryer, heat the desired sticker in order to soften the adhesive.
- > When the sticker is warmed up, with your finger starting from an edge of the sticker, start to peel it off at a 45 degrees angle.
- > ATTENTION: If you feel resistance from the sticker while you try to peel it off, apply a bit of heat with the same method mentioned above.
- > Once the sticker is removed completely, if there is some adhesive left over, clean it using a microfiber cloth with alcohol.
- > Make sure you do not rub the area too hard or you might blur the clear coat of the paint.

#### Tools you need

- > A clean soft microfiber cloth.
- > A 70% alcohol for cleaning excess adhesive.
- > Heat Gun or Hairdryer.

# **INSTALLATION VIDEOS**

For installation process and instructions, refer to the Installation Videos on the Hep Desk pages of our website, www.signaturecd.com.