


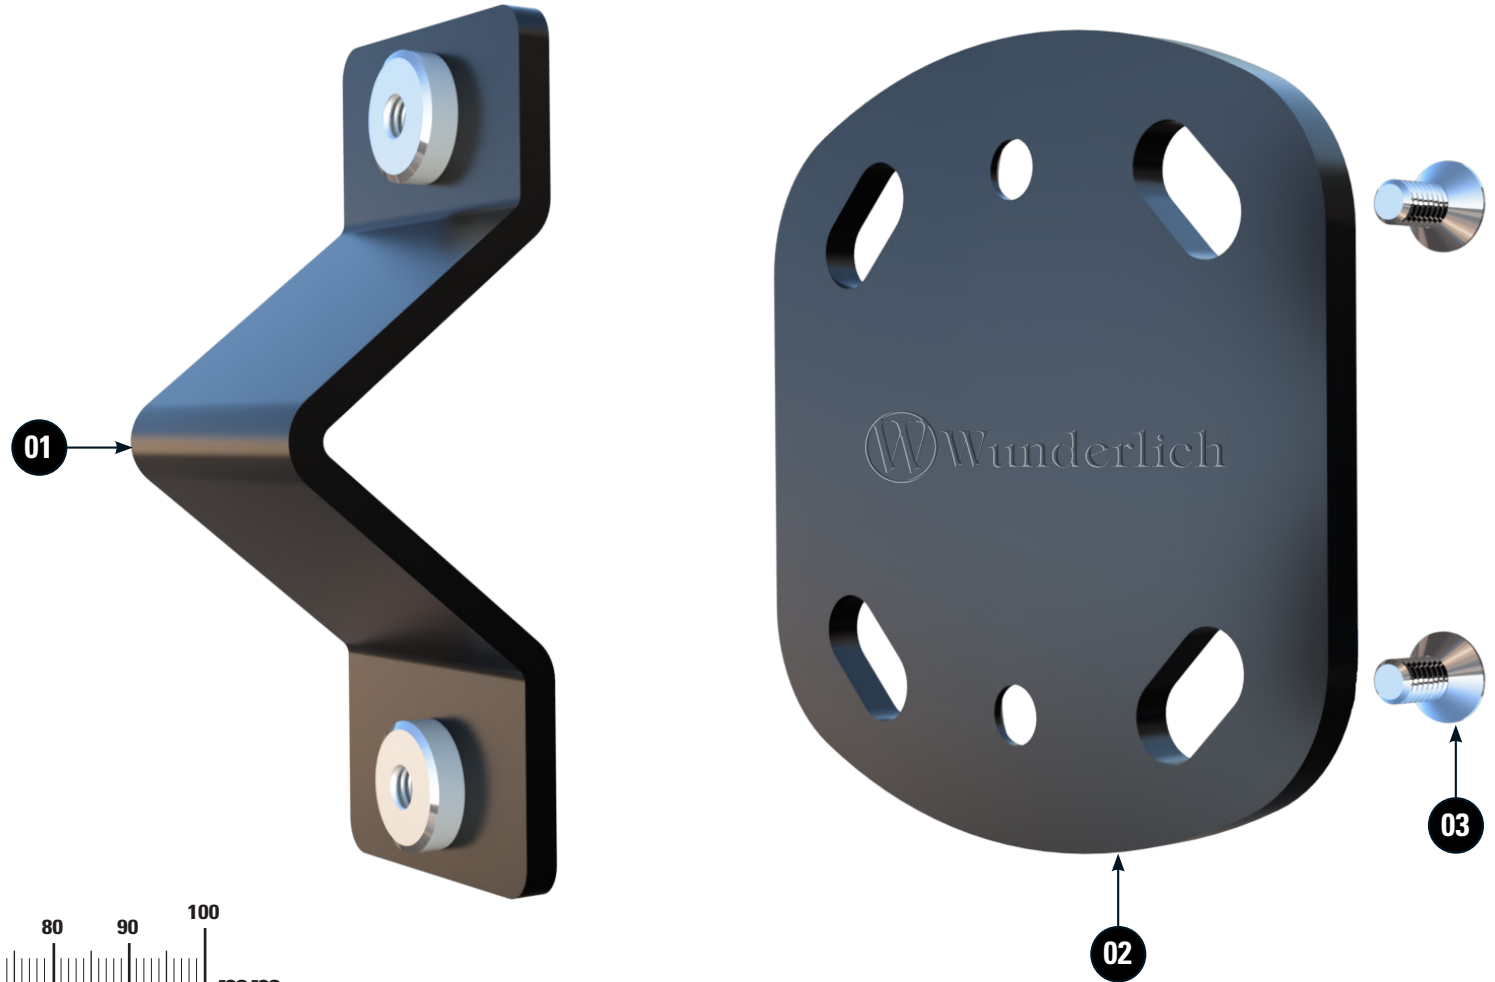







UNIVERSALE-NAVIAUFNAHME AN ROHRTRÄGER


Universal navigation mount at tubular carrier | La navigation universelle se monte sur un support tubulaire | La navegación universal se monta en el soporte tubular | La navigazione universale si monta sul supporto tubolare

Artikel-Nr.: 21176-302



LEGENDE/KEY/FILE LÉGENDE

-  **Anbau Tipp**
Fitting tip
Astuce de montage
-  **Achtung**
Attention
Attention
-  **Vergrößerung**
Magnification
Grossissement
-  **Montagepaste**
Fitting lubricant
Lubrifiant de montage
-  **Schraube**
Screw
Vis
-  **Schraubensicherung**
Thread locking fluid
Freinfilets
-  **Drehmoment**
Torque
Torque
-  **Reiniger**
Cleaner
Nettoyant



#	BEZEICHNUNG / DE DESCRIPTION	DIN	ISO	MENGE QUANTITY
1	Klemmblech / Clamping plate			1
2	Adapterplatte / Adapter plate			1
3	Senkkopfschrauben / Countersunk screw M4 x 8	7991A2	10642A2	2


DIE NR. 1 WELTWEIT FÜR HOCHWERTIGES BMW MOTORRADZUBEHÖR.

01




Wunderlich
complete your BMW.

01

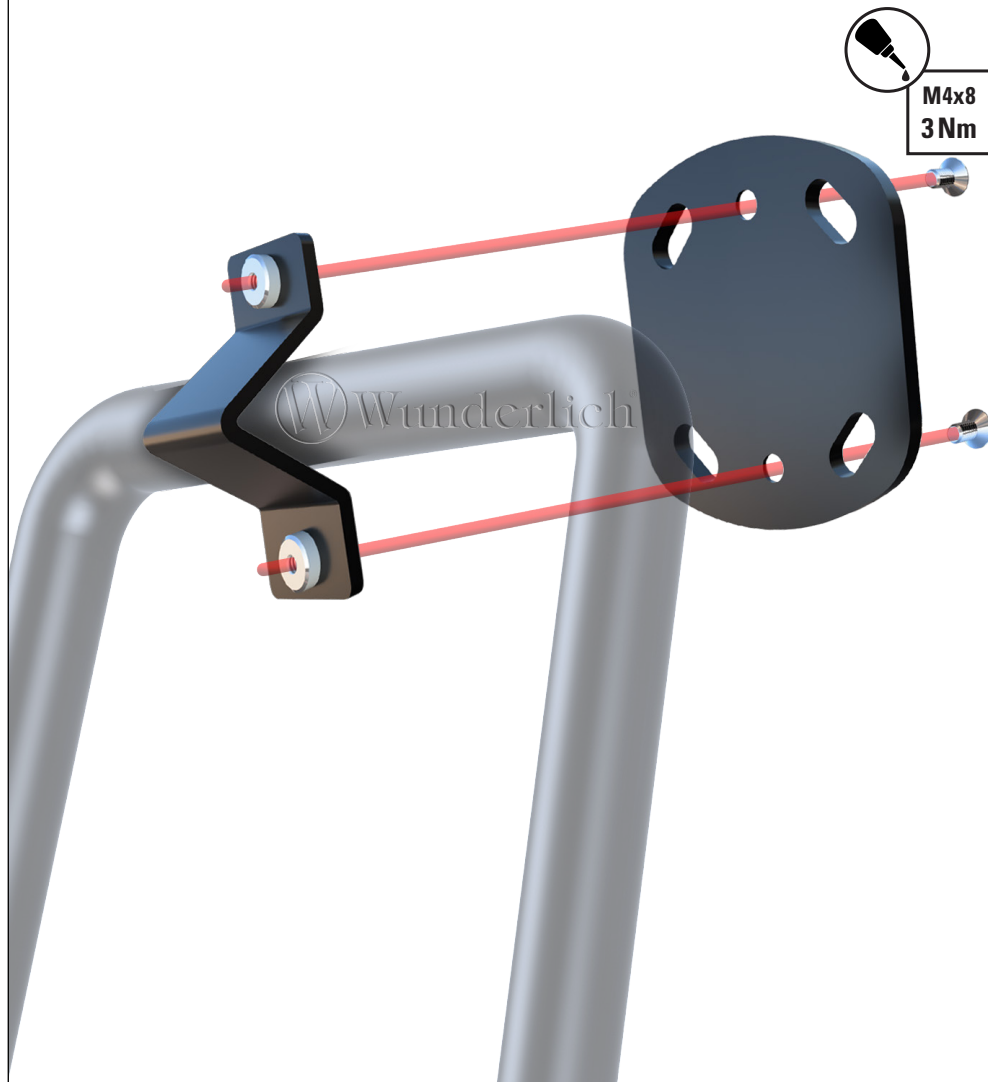

02

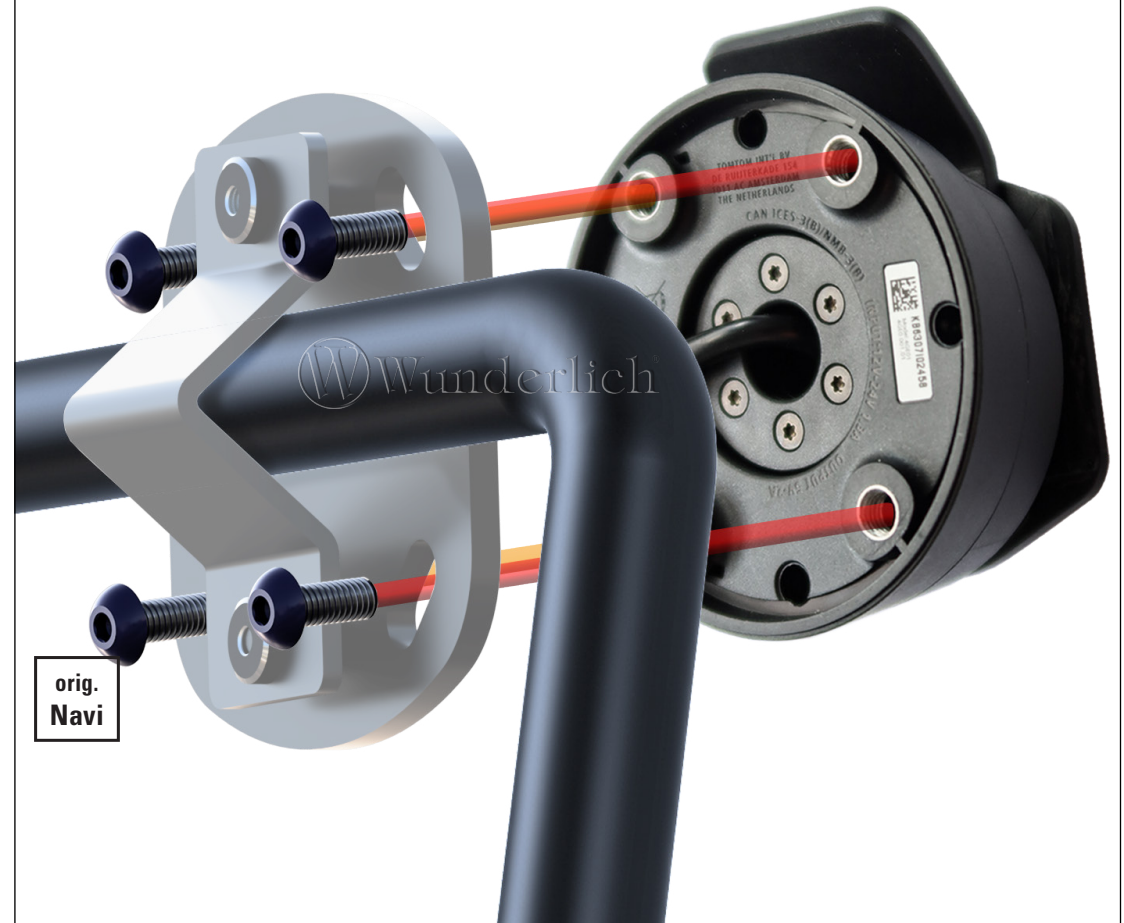

MONTAGEBEISPIEL: TOMTOM HALTER!

Mounting example: TOMTOM holder!

Exemple de montage : Support TOMTOM!